



Create Configuration



Enter Settings

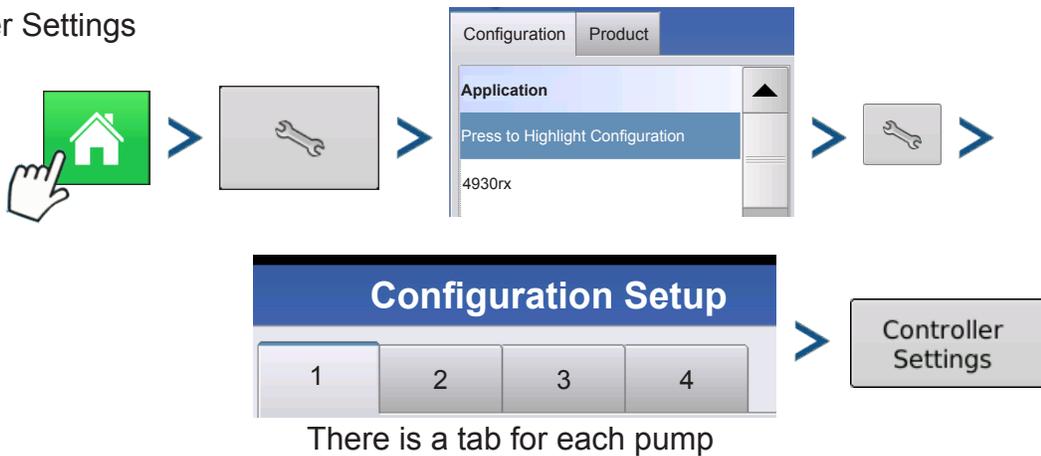

Controller Settings screen

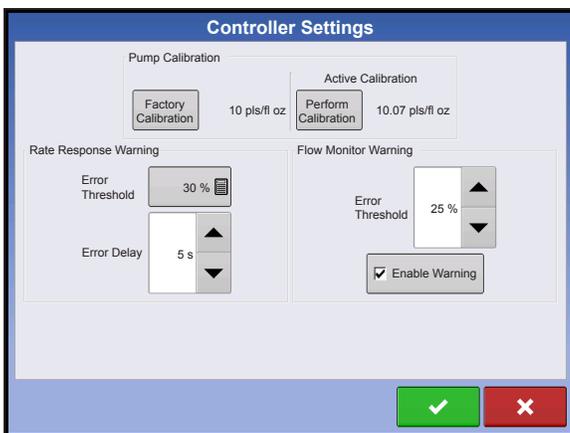

Pump Calibration

Factory Calibration

number found on pump speed sensor, pulses/10 fluid ounces, divide by 10 and enter number, once entered, number should not be changed

Perform Calibration

pump will not run until calibrated, calibrate at beginning of season and when repairs are made

Rate Response Warning

Error Threshold and Error Delay

duration and error allowed before alarm is displayed

Flow Monitor Warning

Error Threshold

percentage of perceived application error allowed before displaying flow sensor warnings


Enable Warning

option of displaying Flow Monitor Warning

To start the Field Operation Wizard and load a configuration:




To view run screen:

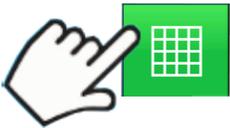

Product Control Toolbox

To change values shown on Product Tab and in Product Control Toolbox, go to the next page where the Rate Control Settings screen is explained.

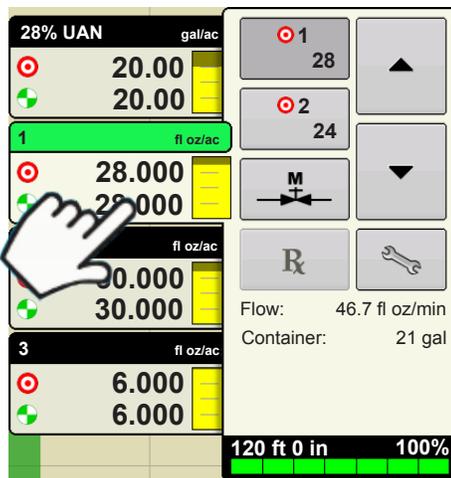

Target Rate

desired amount of product to apply



Actual Rate

actual rate of product being applied as determined by the flow sensor



Product in Tank



Target Rate #1 & #2

preset application rates that allow a quick change between rates



Manual Valve Control

allows operator manual control of valve



Prescription

allows rates to be determined by a loaded prescription



Up and Down Arrows



allow rates to be adjusted manually



Settings button

opens Rate Control Settings screen (explained on next page)

To access the Rate Control Settings window:

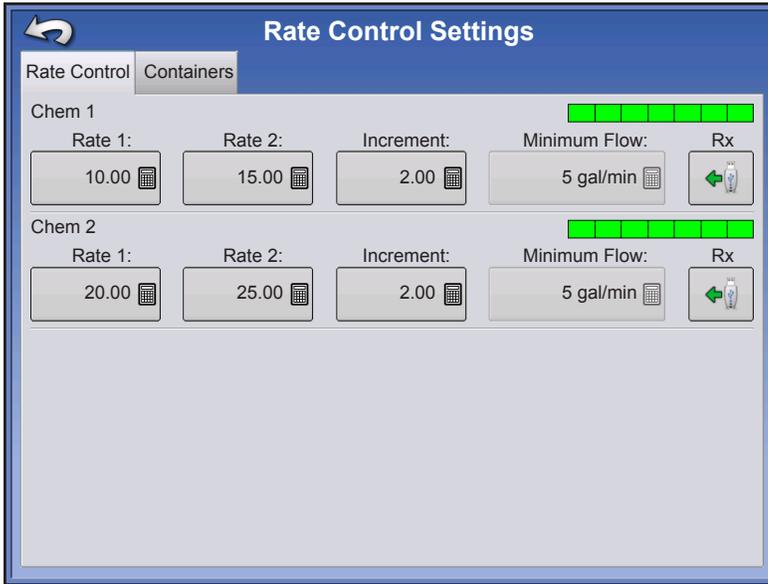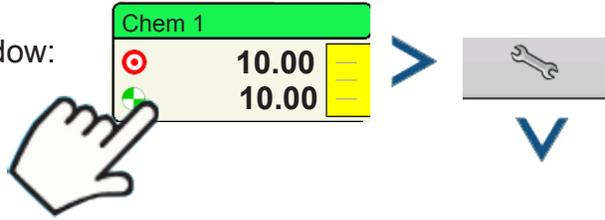

Rate 1 and Rate 2

allows operator to set desired target rates

Increment


values when using up and down arrows in the Product Control Toolbox

Prescription

press to load a map-based prescription file


Minimum Flow

used to maintain a consistent spray pattern, calculate using tip chart. Lowest operating PSI/nozzle x number of nozzles=minimum flow

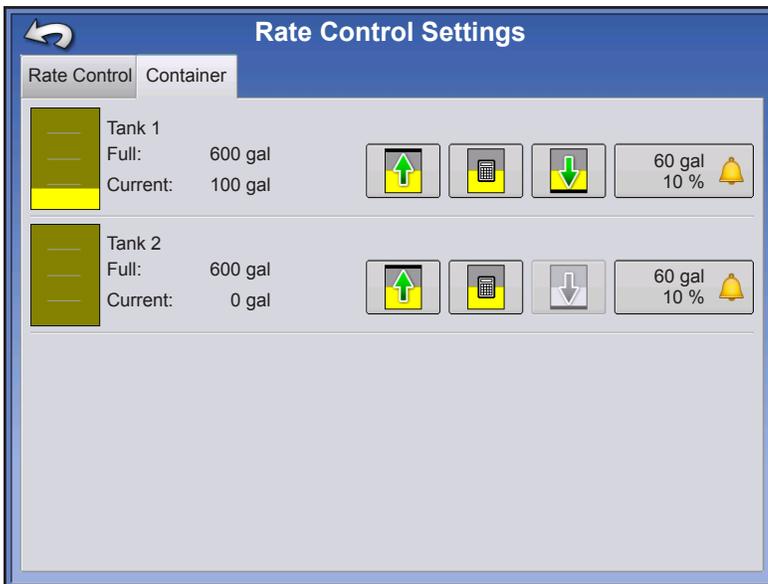

Tank Full

press to fill container

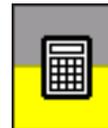

Tank Partially Filled

press to specify container amount




Tank Empty

press to empty container




Tank Alarm Settings

set % or amount remaining for low container alarm

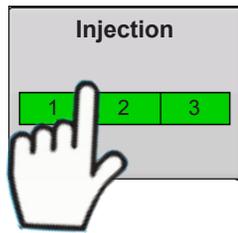

Injection Controls button

number of injection controllers in configuration, green when product is being dispensed

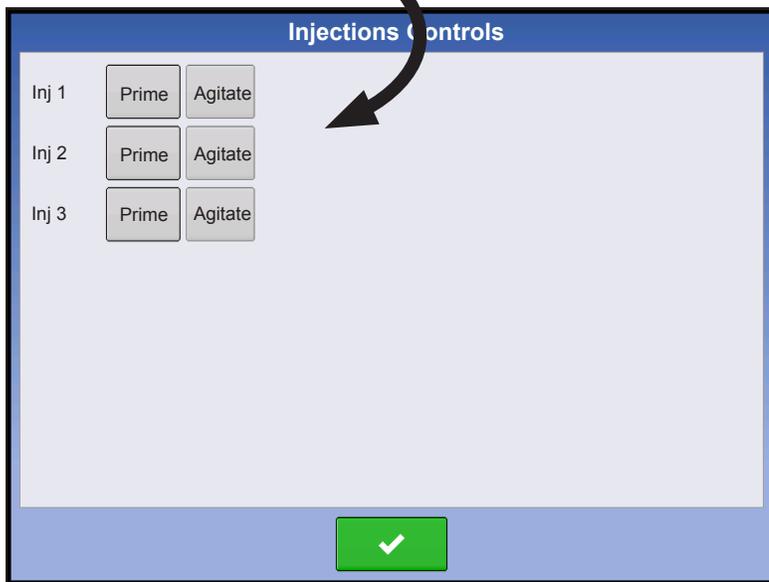

Prime

prime each time you flush/refill a tank, or change products

Agitate

Allows operator to enable the agitation system on the injector tank