

| <b>DirectCommand™<br/>AutoSwath Function</b>    | <b>Problem</b> | <b>Recommended Action</b>   | <b>Result</b>   |
|---|----------------|-----------------------------|---|
| Turn Off Look-Ahead<br>(driving into headlands) | Overlaps       | Increase look-ahead number. | The <b>AutoSwath</b> anticipates headlands sooner and turns the sprayer off sooner. |
|   | Skips          | Decrease look-ahead number. | The <b>AutoSwath</b> anticipates headlands later and turns the sprayer off later.   |
| Turn On Look-Ahead<br>(leaving headlands)       | Overlaps       | Decrease look-ahead number. | The <b>AutoSwath</b> anticipates headlands later and turns the sprayer on later.    |
|   | Skips          | Increase look-ahead number. | The <b>AutoSwath</b> anticipates headlands sooner and turns the sprayer on sooner.  |

#### INTEGRA/VERSA INSTRUCTIONS

1. From the home screen press the **WRENCH**.
2. Highlight current configuration by pressing on it.
3. Press the **WRENCH** in the middle of the screen.
4. Press the **Automatic Swath Control** button.
5. Change Look-Ahead by pressing on the buttons on the right side of the screen. See front of sheet for instructions.
6. Click the **Green Check Mark** to save.


#### INCOMMAND INSTRUCTIONS

1. From the Run Screen press the **Menu**, then **Settings**.
2. Click on **Configuration Settings**
3. Click on **Automatic Swath Control**
4. Click on **Look-Ahead Settings**.
5. Change **Look-Ahead numbers** per instructions on AutoSwath cheat sheet. Press the **Green Checkmark** to save.



Chris: 641-751-3936  
Alec: 641-257-7989

[www.ptprecisionag.com](http://www.ptprecisionag.com)

Check us out!   
@PTprecisionag 