

## Direct Injection Operation

- From the Run Screen, press the *Injection box* in the lower left corner.
- Press on *Prime* to prime the injection pump or *Agitate* to agitate the liquid.
- If the pump is in Agitate mode, the button will be greyed out. To stop agitation, press the *Agitate* button again.
- To prime, press the *Prime* button. The pump will run for 3 minutes. Press the *up and down arrows* to vary pump speed. Holding the up arrow will rapidly increase pump speed. Press the *Green Checkmark* to finish.

