

Setting a Manual Speed

- From the *Home Screen*, press the *Wrench* next to your equipment configuration. This will take you to the *Configuration Setup Menu*.
- From the *Configuration Setup Menu*, press on the Speed Input button.
- Under *Primary Source*, use the drop down menu to select *Manual Speed*. Enter a speed into the speed box. Press the *Green Checkmark* to continue.
- WARNING!** You must change speed input back to *Display GPS*. Failure to do so will result in incorrect rate control and poor Autoswath functionality.

