



BASIC SETUP


1. From the Home Screen wrench next to configuration.

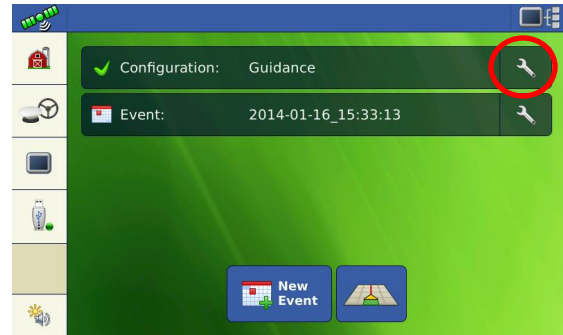

2. From this screen, enter your vehicle and implement measurements.

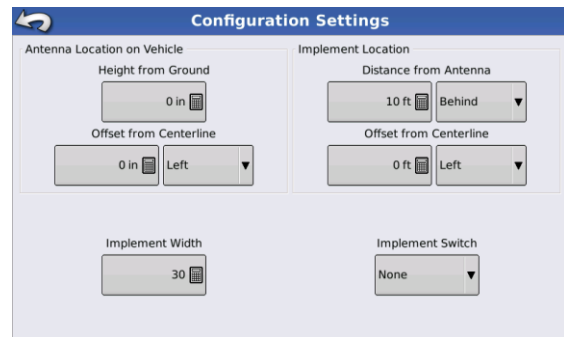


3. From the *Home Screen* press the **GPS & Steering Button**. Use the Steering drop down menu to select the proper steering solution. Pressing the **Wrench** will take you to the steering setup menu.

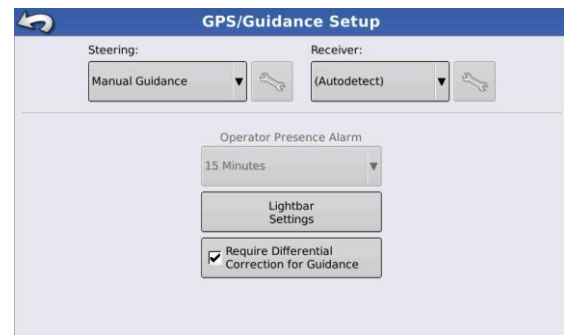


BASIC OPERATION


1. From the **Home Screen** press the **New Event Button**. Or select a previous event by pressing the event button. You can also rename an event by pressing the wrench next to the event name.

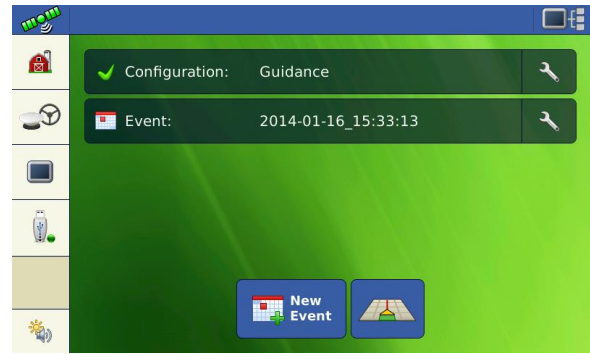

2. Selecting an event will take you to the **Map Screen**. Using the **New Pattern Button** on the left side of the screen, you can create a new guidance line.

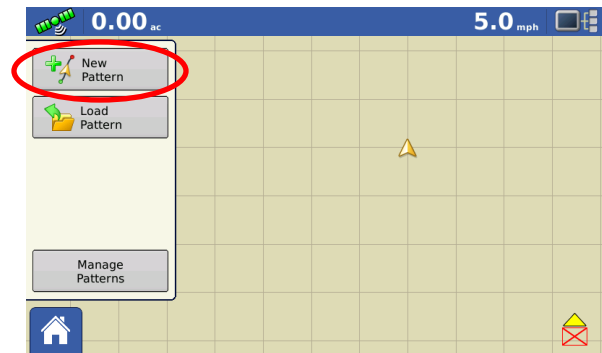

3. Using the **Change Pattern Button**, select the desired guidance pattern. Double check that the proper **Guidance Width** is entered on the right (changes can be made by pressing the **Calculator Button**). Press the **Green Checkmark** to accept your selections.

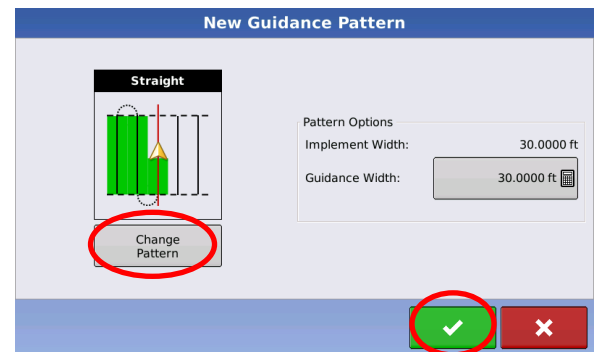

4. Press the **A-B Button** to set your **A Point**, drive the desired distance and press the **A-B Button** again to set the **B Point**.

-If using an **A+ Degree Heading**, press the middle button with the gold arrow to use the tractor's heading or you can enter a known heading using the **Calculator Button**.

