



Set Manual Speed


1. From the Run Screen press the **Menu**, then **Settings**.

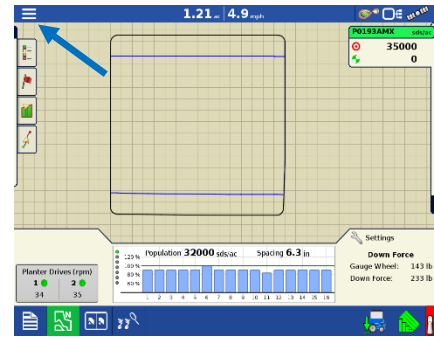


2. Click on **Configuration Settings**

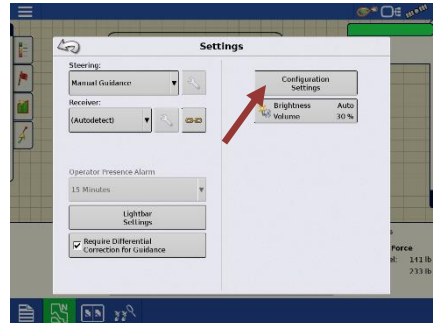

3. Click on **Speed Input**

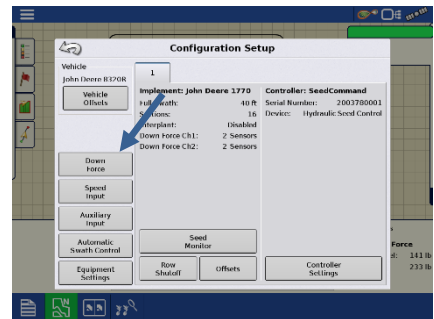

4. Click on **Primary source**.

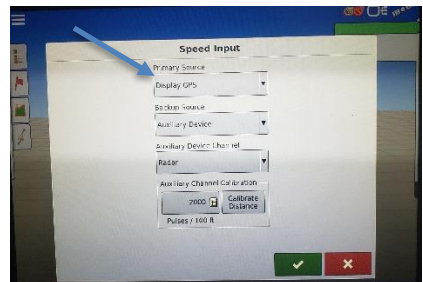

5. Change **Primary source** from **display GPS** to **Manual Speed** and set a **Speed**.

