

Loading A Prescription


1. With an Operation and Field loaded, press on a **Green Target** located next to a product under the product tab.



2. You are now on the Rate Control Settings tab. From here you can load a manual rate, set container levels, or load a prescription. To load a prescription, press the Rx button.



3. Using the drop down boxes, select the file location and the prescription file. Press the **Blue Right Arrow** to continue.

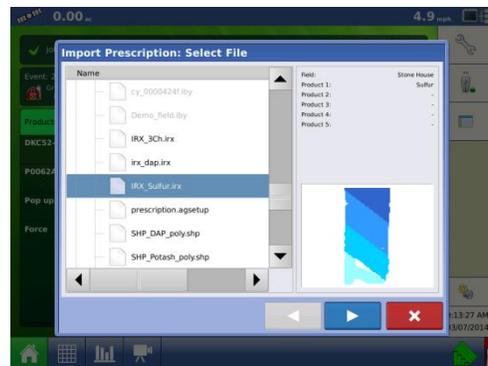

4. Using the drop down boxes, select the prescription layer and product you want to control. Press the **Green Checkmark** to load the prescription and return to the run screen. To use the prescription, press the **RX button** under the run screen rate tab.

